

Read before Setting-up

Stations only communicate when they are on the same electric wire.

By DEFAULT from the electric company, there are always 2 discreet sets of electric wires in the U.S.A. & Canada. See detail in **Product Knowledge, 2nd picture in the picture gallery to the left of the sales page.****

Should you have a plug & play problem with the stations, next room or a room much further away, that means they are NOT on that same piece of electric wire. The distance for the stations is that electric wire.

Use this systematic SETUP to local the outlets on that same piece of electric wire.

- 1) Put all stations on the same channel ID.**
- 2) Start the 1st station at the garage or any locations in the house. Push the LOCK button to activate the monitor mode. Put a sound source (iPod or a radio etc) next to the station.**
- 3) Try the 2nd station in other room. If you can hear from the 1st station, they are on the same electric wire. If not try another outlet.**
- 4) Set up the last station in the Kitchen. *** Avoid all GFIs, they are BAD.. Full detail in Product Knowledge bullet point #2.**
- 5) Marked all working outlets for later reference.**

Please check your Amazon email account for an automated support email from Intercom Central.